
# Soft Absorber

# FA-3625A/FA-3650A/FA-3625SL/FA-3650SL Series



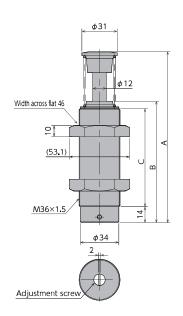

# **Dimensions**

Model	Α	В	С
FA-3625A1/A3/SL-C	150	106.5	86
FA-3650A2/A3/SL-C	217	148.5	128

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Absorption energy per minute J/min (kgf·m/min)	nower of the	Operating temperature °C	Mass g
FA-3625A1-C			2,000 (2,000)	0.3~1.0		30		100 (10.2) or lower	780	
FA-3625A3-C	25	200 (20.4)	700 (700)	0.7~3.0			500(153)			
FA-3625SL-C			62,500 (62,500)	0.05~0.5	25,000	15		OI TOWEI		
FA-3650A2-C			2,700 (2,700)	0.3~2.0	(2,551)	30		100(100)	<b>−</b> 5∼70	
FA-3650A3-C	50	400 (40.8)	1,400(1,400)	0.7~3.0		30	7 357(740)	120(12.2) or lower		980
FA-3650SL-C			124,800(124,800)	0.05~0.5		15		OI LOWEI		

# **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020M36) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

# Adjustment Method



- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.

## **RoHS Compliant**


Products specification might be changed without notice.

# **Optional Parts**

## Inclination angle Adapter OP-010-M3625/M3650

Model
OP-010-M3625
OP-010-M3650

- Screw an inclination angle adapter in the main unit until the backlash between the inclination angle cap and the piston rod is eliminated, and securely tighten the nut for the main unit at that position.
- For an inclination angle 2.5°≦
- The inclination angle guide can be used as a stopper as well
- The soft absorber cannot be used with an optional urethane cap on.
- The maximum inclination angle for use with inclination angle adapter is ± 10°
- The caps and the guides for inclined use are not unbundled.

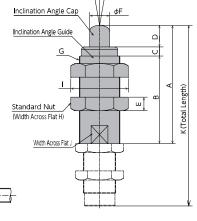


Model	Α	В	С	D	φF	Е	K	G	Н	I	J	Mass g
OP-010-M3625	131	107	10	24	22	15	200	M45×1.5	55	63.5	41	880
OP-010-M3650	201	152	10	29		15	312	10143 ^ 1.3	55	03.5	41	1,270

#### Stopper nut OP-020M36

#### Model OP-020M36

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

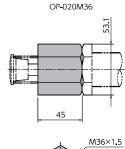




Mass 291g

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


#### Square flange OP-040UB

Model	
OP <b>-</b> 040UB	

• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

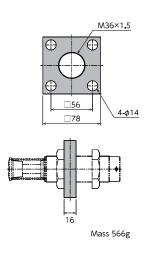

#### Urethane cap OP-090M36B

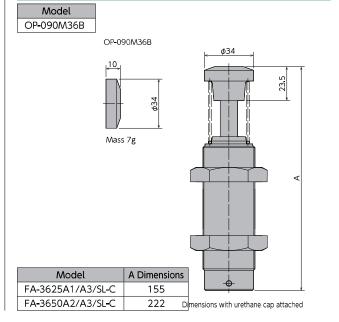


#### Standard nuts are sold separately as well.


Applicable Models	Model
FA-3625A	
FA-3625SL	M36A nut
FA-3650A	MISTOR HUL
FA-3650SL	

# Soft Absorber

## FA-3650UD/FWM-3650UBD Series



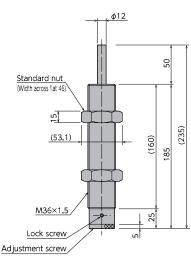

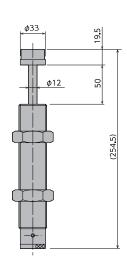

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-3650UD-S			1.400(1.400)	0.7~3	Single-orifice type
FA-3650UD-C	50	392(40)	1,400(1,400)	0.77~3	Single-Office type
FWM-3650UBD-S	50		2.700(2.700)	0.3~2	Multiple verying crifics tupe
FWM-3650UBD-C		2,700(2,700)	0.5~2	Multiple-varying orifice type	

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

# **Common Specifications**

Max. drag	N(kgf)	23,520 ( 2,400)	Operating temperature	°C	<b>−</b> 5~70
Max. cycle rate	cycle/min	30	Mass : S type	g	1,330
Max. absorption energy per minute	J/min(kgf·m/min)	2,352(240)	: C type	g	1,410
Recovering power of the piston re	od N(kgf)	68.6(7.0)or lower			

 
## Selection Guideline FA-3650 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-3650UD series	FWM-3650UBD series
Application	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance

# **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020UB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

# Adjustment Method



To adjust, turn the adjustment knob located at the bottom of the main unit.

- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.

## **RoHS Compliant**


Products specification might be changed without notice.

# **Optional Parts**

#### **Eccentric angle adaptor OP-010UB**

## Model OP-010UB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

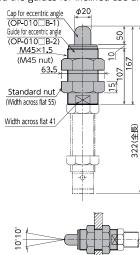


Note) Material of cap for eccentric angle: Metal

Mass 1,273g

## Square flange OP-040UB

Model	
OP-040UB	


Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

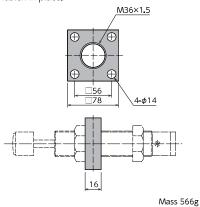

#### Stopper nut OP-020UB-

Model
OP-020UB-S
OP-020UB-C

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

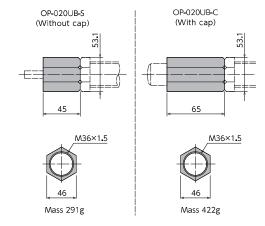

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

## Standard nuts are sold separately as well.

Applicable Models	Model
FA <b>-</b> 3650UD	M36 nut
FWM-3650UBD	